



Information contained in this publication may be considered confidential.
 Materials are recommended when distributing.
 CAT, CATPREFLARE, CATPREFLARE logo and "Compassion Within" are service marks and trademarks of Compassion and may not be used without permission.
 © 2008 Compassion and may not be used without permission.
 Printed in USA

Press START Key

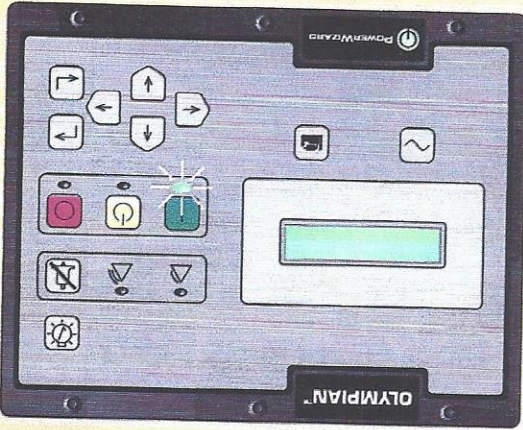

TO START


- | | | |
|----|--------------------------|---------------------------|
| 6. | Alarm Acknowledge Key | 14. ENTER Key |
| 5. | Shutdown Indication Lamp | 12. ESCAPE Key |
| 4. | Warning Indication Lamp | 11, 13, 15, & 16. Display |
| 3. | Engine Overview Key | 10. STOP Key |
| 2. | AC Overview Key | 9. AUTO Key |
| 1. | LCD Display | 8. START Key |
| | | 7. Lamp Test Key |

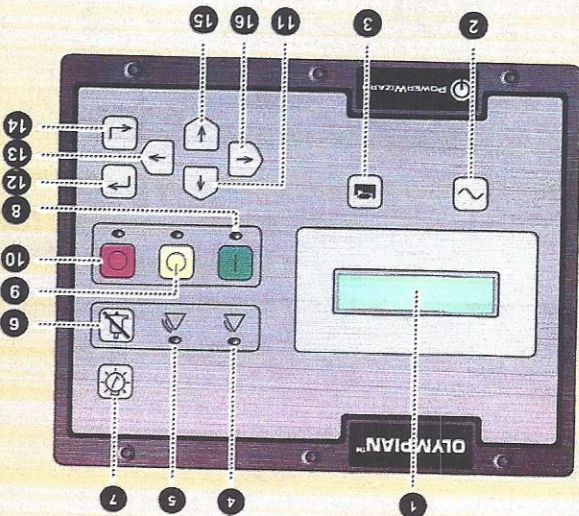

OVERVIEW


Quick Start Guide

Return to START / STOP / AUTO as required

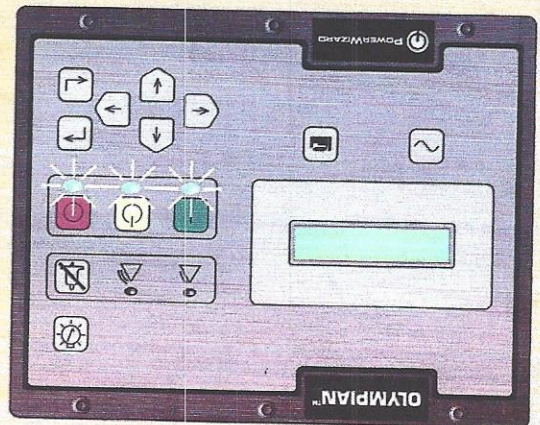


5

To STOP

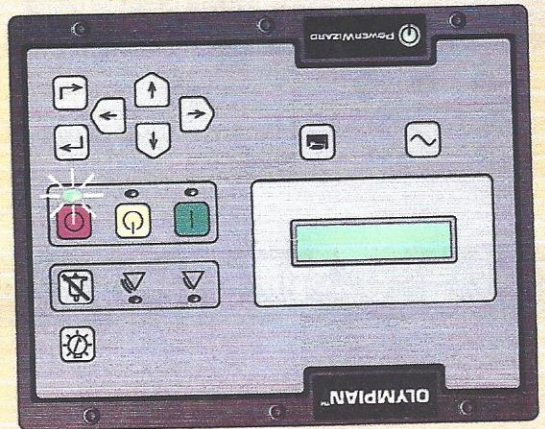


Press STOP Key

AUTO Mode

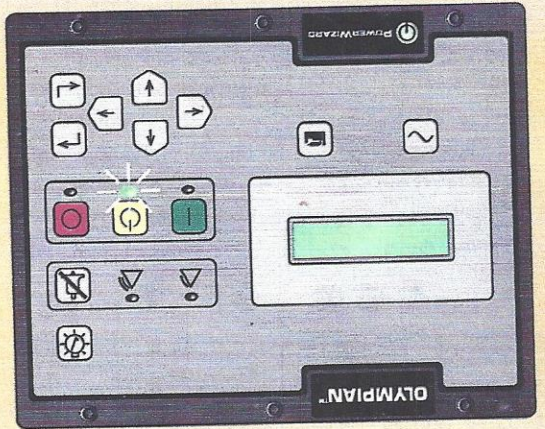

Press AUTO Key


Fault / Alarm Reset Process

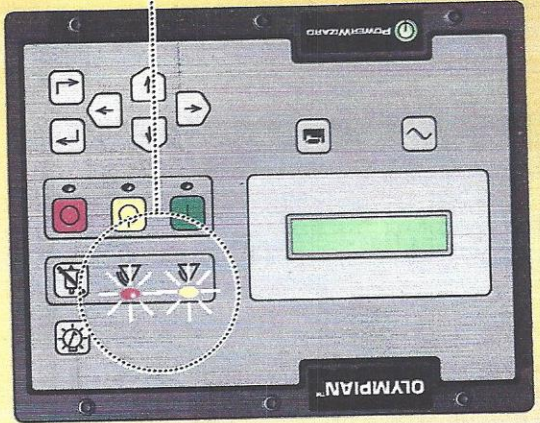

If either of these indication lamps are flashing or solid there is a warning or shutdown


2

Fault / Alarm Reset

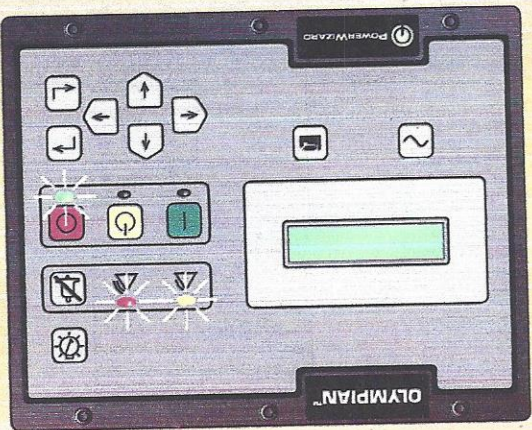


Press STOP Key
Consult Manual to identify & clear fault

Fault / Alarm Reset

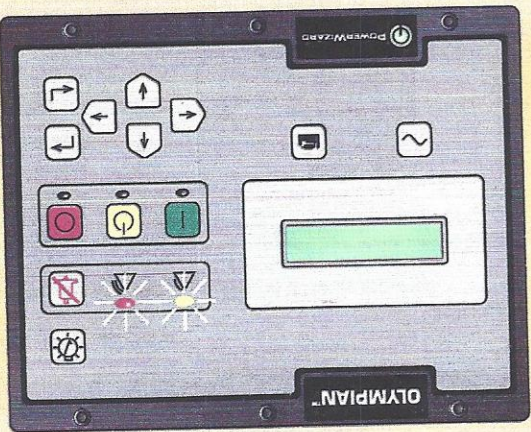

Press and hold "Alarm Acknowledge" key for 3 seconds

Fault / Alarm Reset. The display will show:

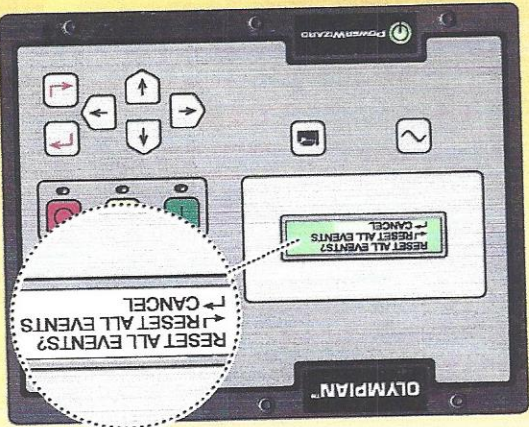

Press ENTER Key to clear all Warnings and / or Shutdowns (or) Press ESCAPE Key to cancel